



REFRIGERATOR-FREEZER

FROST-FREE

YOKF416BB



User Manual

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

IMPORTANT SAFETY INFORMATION.....	1
INFORMATION CONCERNING DISPOSAL.....	6
REFRIGERATOR-FREEZER FEATURES.....	7
INSTALLING YOUR NEW REFRIGERATOR-FREEZER.....	8
USING YOUR REFRIGERATOR-FREEZER.....	13
TROUBLESHOOTING.....	19
TECHNICAL SPECIFICATIONS.....	21

IMPORTANT SAFETY INFORMATION

- In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.
- To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features.
- Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.
- For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.
- Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses and by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.
 - catering and similar non-retail applications.

Children and Vulnerable People Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with or enter the appliance the appliance.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.
- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.
- If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

IMPORTANT SAFETY INFORMATION

General Safety

Safety Warnings



IMPORTANT! For electrical connection carefully follow the instructions given in specific paragraphs.

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Ensure that the electric outlet is properly earthed to ground.
- The power supply for this product must match the power supply stated on the rating plate. Avoid sharing one socket among multiple appliances to prevent overheating and potential fire hazards.
- If the mains socket is loose, do not insert the power plug.
- There is a risk of electric shock or fire.
- Make sure that you can access to the mains plug of the appliance.
- DO NOT use an extension cord or adapter plug. Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- DO NOT pull the power cord or bend it excessively. DO NOT hook the power cord over a metal object, place a heavy object on it, insert the power cord between objects, or push the power cord into the space behind the appliance.
- When moving the appliance, be careful not to roll over or damage the power cord.
- Any damage to the cord may cause a short circuit, fire and-or electric shock.
- Any electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
- Unplug the appliance before cleaning and before changing the light bulb.
- Put the appliance in a dry place, avoiding areas of high moisture or humidity.
- The appliance must not be located close to fires, radiators or cookers.
- DO NOT stand on top of the appliance or place objects (such as laundry, dishes, chemicals, metal objects, lighted cigarettes, lighted candles, etc.) on the appliance.
- It is dangerous to alter the specifications or modify this product in any way.
- If the refrigerator is powered off, it should be powered on again 5 minutes later to prevent damage to the compressor.
- If any live part, abnormal noise, smell, smoke, or other abnormalities are noticed during use, it is essential to immediately power off the appliance and promptly contact the after-sales service department of the company.
- Avoid placing your finger or hand under the refrigerator, especially at the rear bottom, as sharp objects may cause injury.
- Avoid placing your hand between the doors to open or close them to prevent jamming your fingers. Always use the door handle to open or close the door.

IMPORTANT SAFETY INFORMATION



WARNING! Risk of Fire / Flammable Materials

- The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.
- DO NOT damage the refrigerant circuit during transportation and installation.
- Keep ventilation openings, in the appliance enclosure or in the built & in structure, clear of obstruction.
- Refrigerant leaking may cause eye injuries or ignite.
- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

Transportation and Site Warnings



IMPORTANT!

- This appliance is heavy. Care should be taken when moving it.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
- Avoid open flames and sources of ignition.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, condenser) to prevent possible burn.
- DO NOT install in unprotected, humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).
- Refrigerating appliances, especially refrigerator-freezers Type I, may not operate consistently if sited for an extended period below the cold end of the temperature range for which the appliance is designed. This may result in defrosting of contents or the temperature becoming too warm in the frozen food compartment.

Installation Warnings



IMPORTANT!

- Unpack the appliance and check if there are damages on it.
- DO NOT connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Make sure that the mains plug is accessible after the installation of the appliance.
- Allow sufficient space around the appliance and install it on a flat surface.

IMPORTANT SAFETY INFORMATION

Daily Use



CAUTION!

- DO NOT remove or touch items from the freezer compartment if your hands are damp-wet, as this could cause skin abrasions or frost-freezer burns.
- DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- DO NOT use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacturer.
- You must not operate the appliance without the lamp.
- DO NOT touch the light bulb if it has been on for a long period of time because it could be very hot.
- The light bulb supplied with this appliance is a “*special use lamp bulb*” usable only with the appliance supplied. This “*special use lamp*” is not usable for domestic lighting.
- DO NOT store explosive substances such as aerosol cans with a flammable propellant or explosive materials, corrosive acids, or alkaline substances in this appliance.
- DO NOT block the air holes, especially with like plastic bag.
- DO NOT put hot on the plastic parts in the appliance.
- DO NOT place food products directly against the rear wall. Wrap food up properly or place it in airtight containers before putting it into the appliance.
- Frozen food must not be re-frozen once it has been thawed out.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- DO NOT place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- DO NOT put bottles or glass containers in the freezer compartment to prevent breakage and shattering.
- Ice lollies can cause frost burns if consumed straight from the appliance.
- Appliance's manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Take precautions to prevent and undue rise in the temperature of frozen while defrosting the refrigerating appliance.
- The rise in temperature of frozen food during manual defrosting, maintenance, or cleaning may reduce its storage life.
- Ensure proper care for frozen food storage during extended periods when the refrigerating appliance is not running, such as during a power outage or refrigeration system failure.
- Steps to take when temporarily or permanently switching off the refrigerating appliance include emptying, cleaning, and drying it, and propping the door(s) or lid(s) ajar.

IMPORTANT SAFETY INFORMATION

Saving Energy

- DO NOT put hot food in the appliance.
- DO NOT pack food close together as this prevents air circulating.
- Make sure food do not touch the back of the compartment(s).
- If electricity goes off, do not open the door(s).
- DO NOT open the door(s) frequently.
- DO NOT keep the door(s) open for too long time.
- DO NOT set the thermostat on exceeding cold temperatures.
- Some accessories, such as drawers, can be removed to get larger storage volume and lower energy consumption.

CLEANING AND MAINTENANCE



CAUTION!

Before cleaning and performing maintenance, switch off the appliance and disconnect the mains plug from the mains socket, take out the food and store in a cool location.

- DO NOT clean the appliance with stainless steel cleaners, abrasive pads or other metal objects as they are likely to scratch the surface.
- Never use hot water, solvents, aerosol cleaners, strong detergents, scourers, caustic or abrasive cleaners etc. Clean with a soft cloth.
- DO NOT clean by spraying water or liquid directly onto the appliance.
- DO NOT use sharp objects to remove frost from the appliance. Use a plastic scraper.
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If the drain is blocked, water will collect in the bottom of the appliance.
- If you will be away for a very long period of time (3 weeks or more), empty the appliance including ice bucket, unplug the appliance, wipe excess moisture from the inside walls, and leave the doors open to prevent odors and mold.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

INFORMATION CONCERNING DISPOSAL

You can help protect the environment!

CORRECT DISPOSAL OF THIS APPLIANCE

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.
3. Children or animals should be supervised to ensure that they do not play with or enter the appliance.

This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.




The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Disposal of Packaging Materials

The materials with the symbol  are recyclable. Dispose the packaging in a suitable collection container to recycle it.

REFRIGERATOR-FREEZER FEATURES

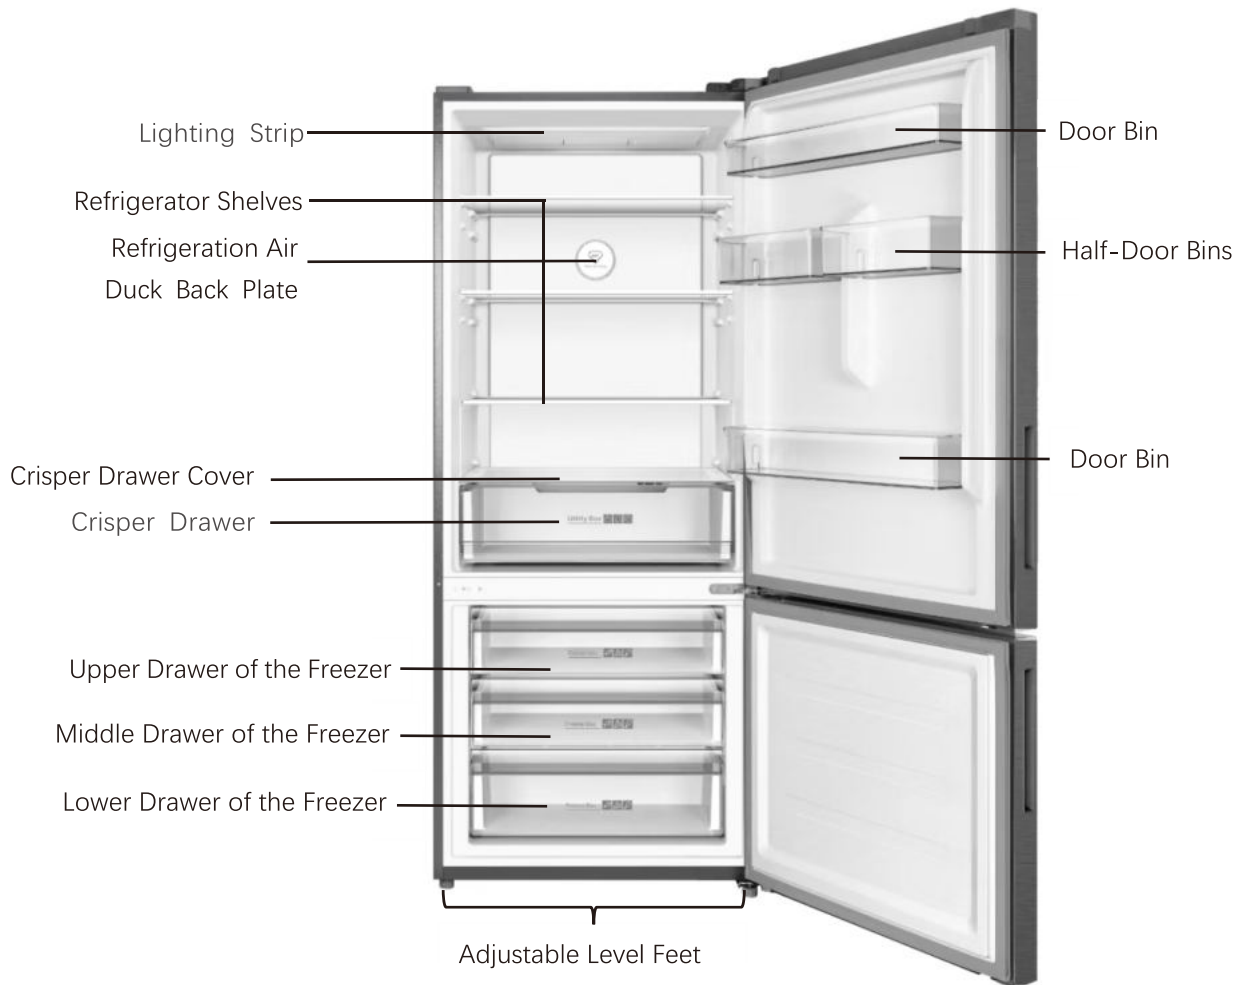






Tips

- Fridge Crisper Drawer- For storing vegetables and fruits.
- Freezer Drawers – For storing foods to be preserved for long-term, such as meat and fish.
- Door Bins – For storing eggs, different kinds of bottled drinks and other fragmentary items.

Note: Above picture is for reference only. The actual appliance maybe slightly different.

INSTALLING YOUR NEW REFRIGERATOR-FREEZER

Handling and Placement

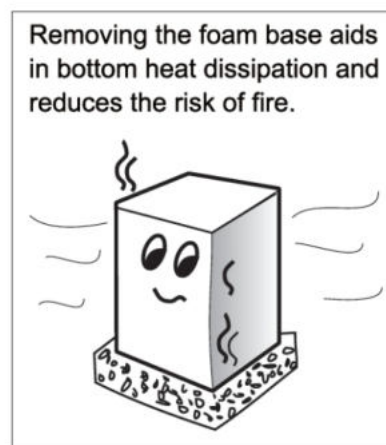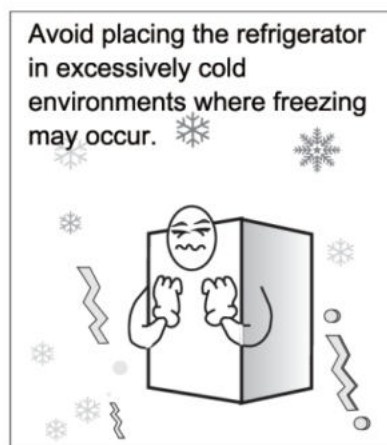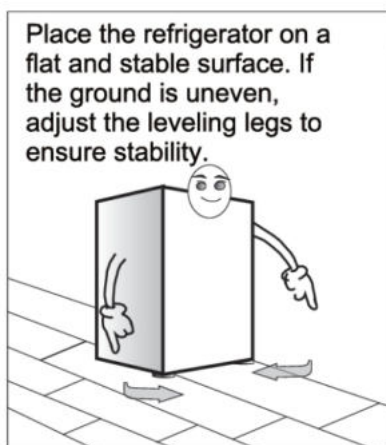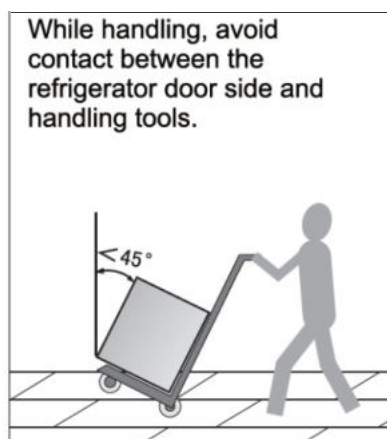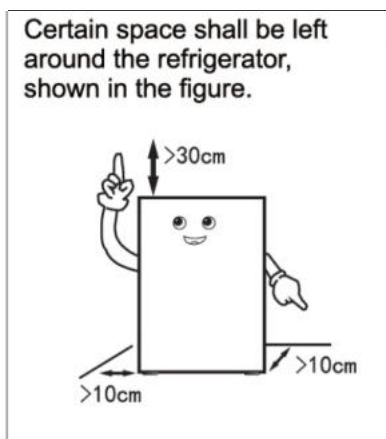

Friendly Reminder

When handling the refrigerator, at least two persons are required: one to lift the top of the rear part, and the other to handle the bottom. If one part alone is clamped, it can be dangerous and may cause accidents.

When moving the refrigerator, the lower runner may damage and scratch the floor. If you need to move the refrigerator over a long distance, use adhesive tape to secure the internal accessories to prevent them from getting damaged by crashing into each other.

Place the refrigerator in a position with minimal vibration or where it is least exposed to vibration. For users in areas prone to earthquakes, ensure the refrigerator is fixed against a wall or pole to prevent accidents.

Leave sufficient clearance around the refrigerator. If the clearance is too small or if goods are placed on top or too close to the sides, or if items are pasted onto the sides, it can affect the refrigerator's heat dissipation, leading to unnecessary electricity wastage and potential damage to walls and other items. Contact between the back of the refrigerator and the wall can also cause vibration and noise.

Adjust the front part and adjusting leg of the refrigerator to level it. An unlevel refrigerator can cause vibration and noise.

INSTALLING YOUR NEW REFRIGERATOR-FREEZER

Ambient Temperature

- The appliance is designed for a specific climate class. Depending on the climate class, the appliance can be operated at the following temperatures.
- The climate class can be found on the rating plate.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

NOTE: The cooling performance and power consumption of the refrigerator maybe affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator. We recommend adjusting the temperature settings as appropriate.

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc.. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 100 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

Warning! It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.


Electrical Connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply, and a standard independent 3-hole socket rated above 10A and reliably grounded must be used. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

INSTALLING YOUR NEW REFRIGERATOR-FREEZER

Space Requirement

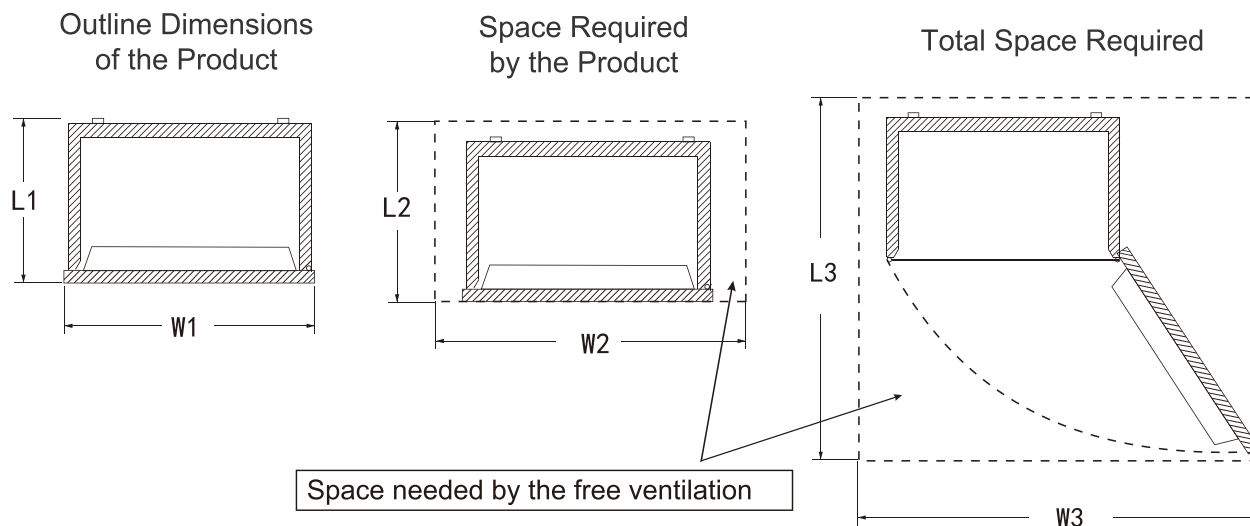

Unit: mm

Outline Dimensions of the Product		Space Required by the Product		Total Space Required	
L1	W1	L2	W2	L3	W3
689	703	$>L1+100$	$>W1+200$	$>L1+690$	$>W1+600$


Preparations Prior To Use

1. Remove fixing tape




In hot summer, 24 hours are needed to fully freeze the food. Check the refrigerating condition on the second day.

2. Connect to power

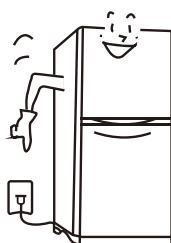

3. Store food after connecting to power for 2-3 hours

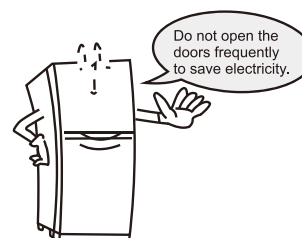

The plastics deodorant will disappear automatically after freezing for a while.

INSTALLING YOUR NEW REFRIGERATOR-FREEZER

Reversing the door (If required)

While changing over the door hinges, ensure that the appliance is not connected to the power supply. Pull out the mains plug beforehand. To prevent damaging the back of the appliance, place adequate padding underneath. Carefully place the appliance on its back.

Tools you will need

- Phillips head screwdriver (+), Spanner — Not provided
- The components included in the poly bag

Left Upper Hinger x 1



Left Upper Hinger Cover x 1



Left Lower Hinge Assembly x 1



Left Middle Hinge x 1




Right Upper Decorative Cover x 1




Left Door Stop x 2




1. Close the door, remove the screw from the upper hinge covers by Phillips screwdriver. Take off hinge cover, then unscrew top hinge and take off upper door. Remove left screw cover.

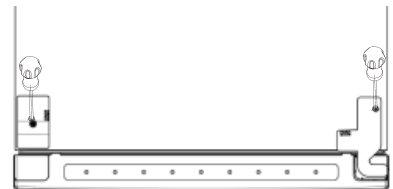

 2. Unscrew from the middle hinge by Phillips screwdriver, remove the screw cover at the left screw hole, then take down the lower door.

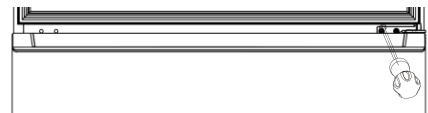


3. Laying down the refrigerator, remove the lower hinge and the adjusting feet at the bottom of the refrigerator as below.

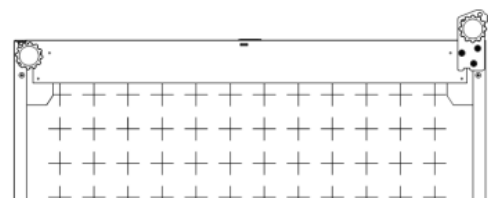


INSTALLING YOUR NEW REFRIGERATOR-FREEZER

4. Remove the left decorative cover on the upper end of the door, and install the right decorative cover prepared in advance. Install the left door stopper on the left side of the upper and lower door, and install the stop prepared in advance. (Replacement of upper and lower door stop is the same)

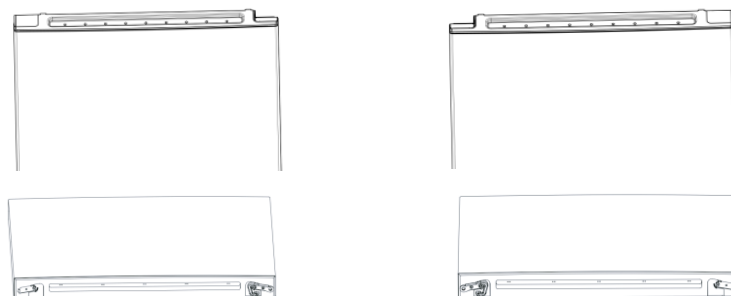

5. Install the left lower hinge assembly prepared in advance on the left side. Install the previously removed leveling foot to the right side and install the lower door.

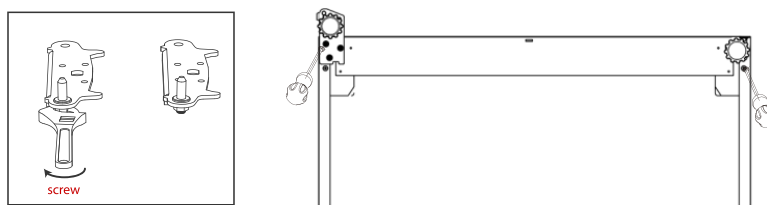

6. Install the prepared middle hinge in the left mounting position and install the previously removed screw cover into the right screw hole.




7. Install the door, install the left upper hinge, the left upper hinge cover and the previously removed screw cover. (The upper hinge and hinge cover are installed on the left side, and the screw is on the right side)



8. Wait a few hours and plug in the power cord. Do not leave the fridge lying down for an extended period.

USING YOUR REFRIGERATOR-FREEZER

Using the Control Panel

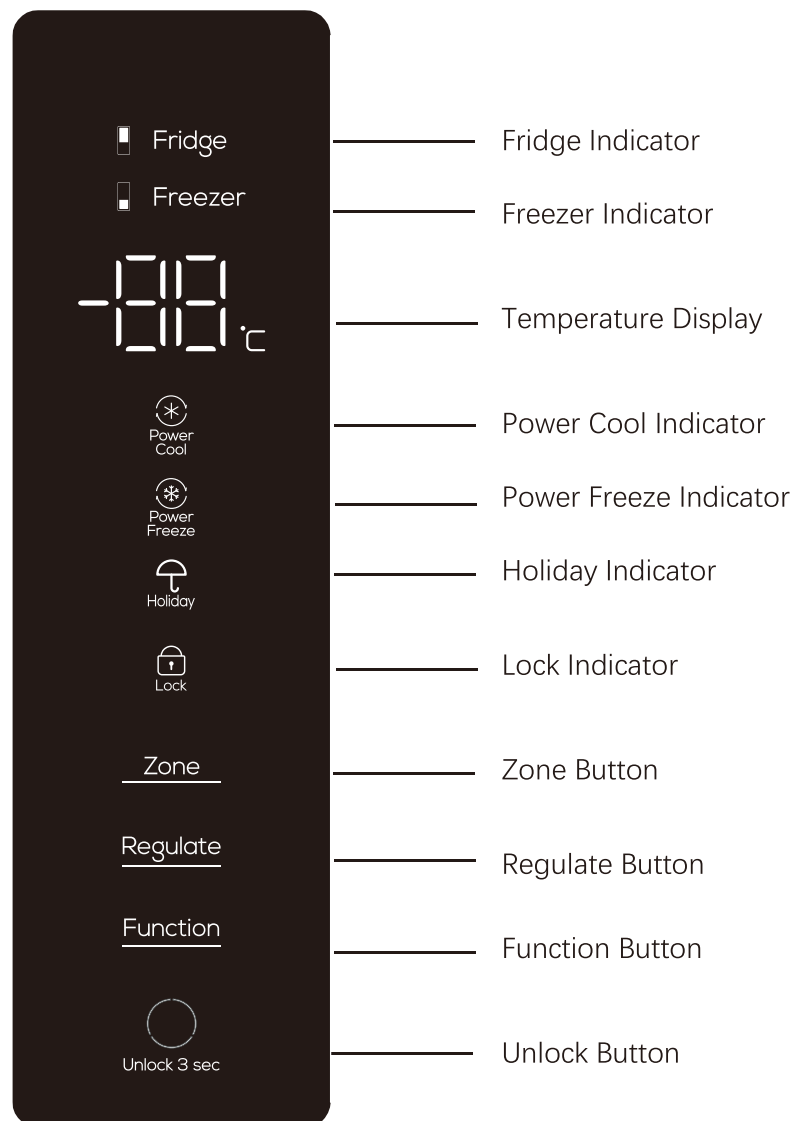

USING YOUR REFRIGERATOR-FREEZER

Powering on for the first time

When the appliance is powered on for the first time, the refrigerator will start the intelligent mode and

- The fridge will run at 5°C.
- The freezer will run at -18°C.

Child Lock - The lock deactivates the function of all buttons.

- Turn on - When there is no key operation on the display screen, the control panel will automatically lock and the child lock function is turned on after 30 seconds.
- Turn off - When the display screen is in the locked state, press the "**Unlock 3 Sec**" button and hold it for 3 seconds to unlock, and the child lock function is turned off.

Fridge Temperature Adjustment (2°C~8°C)

- In the unlocked state, repeatedly press the "**Zone**" button until the fridge indicator is illuminates.
- Repeatedly press the "**Regulate**" button to cycle through the temperature options:

"02"→"03"→"04"→"05"→"06"→"07"→"08"→"02" ...

- Select the appropriate temperature to adjust the temperature of the fridge.

Freezer Temperature Adjustment (-24°C~-15°C)

- In the unlocked state, repeatedly press the "**Zone**" button until the freezer indicator illuminates.
- Repeatedly press the "**Regulate**" button to cycle through the temperature options:

"-24"→"-23"→"-22"→"-21"→"-20"→"-19"→"-18"→"-17"→"-16"→"-15"→"-24" ...

- Select the appropriate temperature to adjust the temperature of the freezer.

Power Cool Mode

- In the unlocked state, press the "**Function**" button repeatedly until the Power Cool indicator flashes. Stop pressing the "**Function**" button for 3 seconds to enter Fridge Compartment Power Cool mode. The temperature of the fridge will rapidly cool down until it reaches 2°C.
- The fridge will automatically exit Power Cool mode after 2 hours or if the door is open for over 3 minutes.
- Under Power Cool State, select another function to manually exit Power Cool mode.

USING YOUR REFRIGERATOR-FREEZER

Power Freeze Mode

- Press the “**Function**” button repeatedly until the Power Freeze indicator flashes. Stop pressing the “**Function**” button for 3 seconds to enter Power Freeze mode. The temperature of the freezer will rapidly cool down until it reaches -32°C.
- The freezer will automatically exit Power Cool mode after 4 hours.
- Select another function to manually exit Power Freeze mode.

Holiday Mode

- In Holiday mode, the fridge compartment will power off and the temperature display will illuminate “OF”.
- In the unlock state, press the “**Function**” button repeatedly until the Holiday indicator flashes. Stop pressing the “**Function**” button for 3 seconds to enter Holiday mode.
- Select another function to manually exit Holiday mode.

NOTE: Before activating the Holiday mode, remove all contents the fridge compartment.

Power Off Memory

- In the event of a power outage, when power is restored, the fridge will return to the previous settings.

Door Alarm

- If the fridge is not closed tightly or stays open for more than 1 minute, the alarm will beep.
- Press any button to pause the alarm. The alarm will beep again after 1 minute.
- Close the fridge door tightly to stop the alarm.

Freezer High Temperature Warning

- When the power is switched on and the temperature of the freezer is higher than -12°C, the “Freezer” indicator will flash.
- Press any button to display the temperature of the freezer when it is powered on. After 10 seconds, the control panel will return to the normal display state.

Control Panel Protection

- After 30 seconds of no user input, the control panel will automatically lock.
- Press any button to exit control panel protection function.

USING YOUR REFRIGERATOR-FREEZER

First Use

Cleaning the Interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a branding new product, then dry thoroughly.

Important! DO NOT use detergents or abrasive powders, as these will damage the finish.

Daily Use

Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the bottom compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours; during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use, before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).


Thawing

- Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.
- Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Accessories

Movable shelves and drawers

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired and remove or replace the drawers.

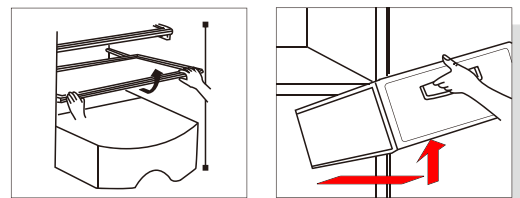

USING YOUR REFRIGERATOR-FREEZER

Helpful hints and tips

Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- Only freeze top quality, fresh and thoroughly cleaned, foodstuffs.
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to Thaw only the quantity required.
- Wrap up the food in aluminum foil or polythene and make sure that the packages are airtight.
- Do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter.
- Lean foods store better and longer than fatty ones; salt reduces the storage life of food.
- Water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt.
- It is advisable to show the freezing in date on each individual pack to enable you to remove from the freezer compartment, can possibly cause the skin to be freeze burnt.
- It is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- Make sure that the commercially frozen foodstuffs were adequately stored by the retailer.
- Be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time.
- Not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.
- Do not exceed the storage period indicated by the food manufacturer.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator.
- Do cover or wrap the food, particularly if it has a strong flavor.

Hints for refrigeration

- Make (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc.: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- Butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottle: these should have a cap and should be stored in the bins on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

USING YOUR REFRIGERATOR-FREEZER

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.

Caution!

- The appliance may not be connected to the mains during cleaning.
- **Danger of electrical shock! Before cleaning, switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse.**
- **Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts.**
- The appliance must be dry before it is placed back into service.

Important!

- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.
- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners.
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains or switch off or turn out the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.
- After unplugging the plug, 5 minutes must pass before re-plugging it.

TROUBLESHOOTING

Before calling for service, please read the following troubleshooting table first. This can save both your time and money.

CAUTION! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in his manual.

IMPORTANT! There will be some sound/noise during normal operation (compressor or refrigerant circulation).

Problems	Possible Causes	Solutions
Appliance does not work	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary
	Socket is defective	Mains malfunctions are to be corrected by an electrician
Appliance freezes or cools too much	Temperature is set too cold	Turn the temperature regulator to a warmer setting temporarily
The food is not frozen enough	Temperature is not properly adjusted	Please look in the initial Temperature Setting Section
	Door was open for extended period	Open the door only as long as necessary
	A large quantity of warm food was placed in the appliance within the last 24 hours	Turn the temperature regulation to a colder setting temporarily
	The appliance is near a heat source	Please look in the installation location section
Heavy build-up of frost on the door seal	Door seal is not air tight	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly
Unusual noises	Appliance is not level	Re-adjust the feet.
	The appliance is touching the wall or other objects	Move the appliance slightly
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall	If necessary, carefully bend the component out of the way
Indicator lights flashing	Sensor fault	Inform the maintenance center

*If the malfunction shows again, contact the Service Center.

TROUBLESHOOTING

NON-FAILURES

Problems	Possible Causes
The door is too tight and not easy to open.	Reopening of the door immediately after closing it is hard because hot air enters the fridge and contracts to produce pressure difference. It is easy to open the door after a while.
There is a water rippling sound in the fridge.	Starting and stopping the compressor, or water produced after defrosting will make such sound.
There is a humming sound in the fridge.	Running the compressor will make such a sound (if the fridge is not levelled, this sound will be louder). Shrinkage and swelling of fridge body will make such a sound. When the fridge is cold or the door is opened, this sound will occur.
There is condensation or frost in the freezer, door surface or food surface.	The temperature or humidity around the fridge is high. The door is opened for too long. Foods with water are not sealed or tightly wrapped.
There is condensation on the built-in light surface.	The light will illuminate and produce heat and when the door is open for too long, causing condensation.
There is condensation or mist on the fridge body.	Humidity around the fridge is high and the moisture in the air will gather in the fridge to form condensation.
Heat on two sides and spacing part surface between fridge and freezer compartments.	Fridge pipes (condenser, anti-fog pipes) are on two sides and front part of fridge for heat dissipation and to prevent from condensation.

TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS MODEL	YOKF416BB
GROUP	5B
CLIMATE CLASS	T
ANTI-ELECTRIC SHOCK	I
RATED VOLTAGE	220-240V~
RATED FREQUENCY	50Hz
RATED CURRENT	1,6A
LAMP POWER	2W
DEFROST INPUT	190W
REFRIGERANT	R600a (56g)
BLOWING AGENT	Cyclopentane
NOISE LEVEL	39dB(A)
NET CAPACITY TOTAL	416L
NET CAPACITY FRIDGE	310L
NET CAPACITY FREEZER	106L
FROST FREE	Yes
ENERGY RATING	5 Stars
CEC (kW·h/year)	273
UNIT DIMENSIONS	W703 x D689 x H1725 mm
NET WEIGHT	72 KGS

Thank you for using YOKOHAMA product!

**Comfort you
can rely on**

Yokohama has you covered!

